

Failure Display and Inspection

If an abnormality comes up, the induction hotplate will enter the protective state automatically and display corresponding protective codes:

Error Message	Cause	Solution
E0	<ul style="list-style-type: none">• no cookware or the cookware is not suitable for the induction cooker	<ul style="list-style-type: none">• put the suitable cookware on the cooking zone
E1	<ul style="list-style-type: none">• The device becomes too hot (e.g. due to blocked ventilation slots)• Parts are damaged (e.g. transistor)	<ul style="list-style-type: none">• Clear/unblock ventilation slots. Let the device cool off for a few minutes; the device is ready for operation afterwards. Contact the retailer in case the error message remains indicated in the display after the device has cooled off.• Contact retailer.
E2	<ul style="list-style-type: none">• Overheating-protection was activated and the device switched off.	<ul style="list-style-type: none">• Remove the cookware from the hob. Let the device cool off for a few minutes. The device is ready for operation afterwards.
E3	<ul style="list-style-type: none">• Temporary overvoltage, device became too hot.	<ul style="list-style-type: none">• Let the device cool off for a few minutes. The device is ready for operation afterwards.

The above are the judgment and inspection of common failures. Please do not disassemble the unit by yourself to avoid any dangers and damages to the induction hotplate.